

Burner BootLoader Update Instructions

When using the EZPro100 HID version of the burning software, you need to make sure that the bootloader of the burner is the USB_HID version before you can use the software normally. If the bootloader of the burner is not the USB_HID version, this article provides a method to update the bootloader, you can follow the steps below. If the bootloader is not USB_HID version, then this article provides the method to update the bootloader, you can follow the steps below. (If the bootloader is already USB_HID version, then no need to update).

Two update programs are provided: BootLoader Update Software and BootLoader One-Click Update Software. The BootLoader update software requires you to hold down the button to power up the burner before it can be used, while the BootLoader one-click update software does not require this action.

We recommend you to use BootLoader one-click update software, it is convenient and quick to convert serial port and hid with one click.

I. BootLoader update software


1. Update the BootLoader of the burner to USB_HID type.

Step one:

Connect the burner USB cable to the computer and plug the burner into a power source.


Step two:

Open the EZPro100 HID version of the burning software, if the software pops up a prompt as shown in the figure below, it means that the burner bootloader needs to be updated (if there is no prompt, then no need to do it), and then follow the steps below to continue the operation

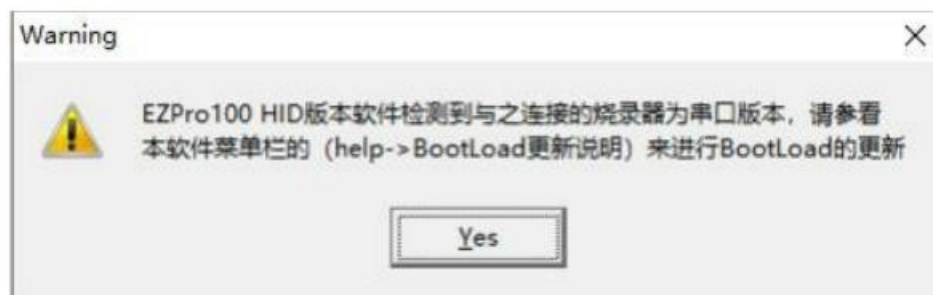

Step Three:

After waiting for the EZPro100 HID version to open, press and hold the red button of the burner to re-power up the burner, and then click HELP→ Click to open the Bootloader update software in the menu bar of the EZPro100 HID software, as follows

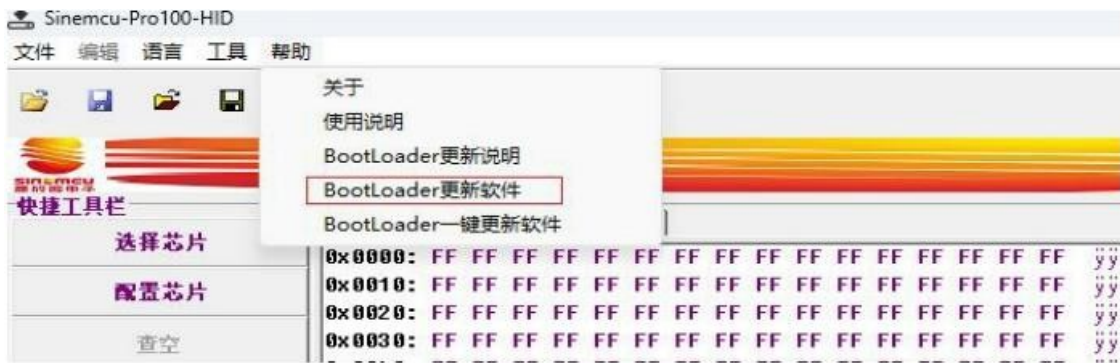

Step Four:

Open the bootloader update software as shown below, directly click on the Update from Serial Port to HID button, wait for the update progress bar to complete, then close this software (HID Updata), and then directly use the EZPro100 HID version of the software to download.




2、 Update the bootloader of the burner to USB_ serial port type

If you want to update the bootloader of the burner to the USB serial port type, you can also use the (HID_Updata) software, the procedure is as follows.
Step one:

Open the EZPro100 HID version burner software, then press and hold

the red button of the burner to re-power up the burner, and then click
HELP→open the bootloader update software, as follows

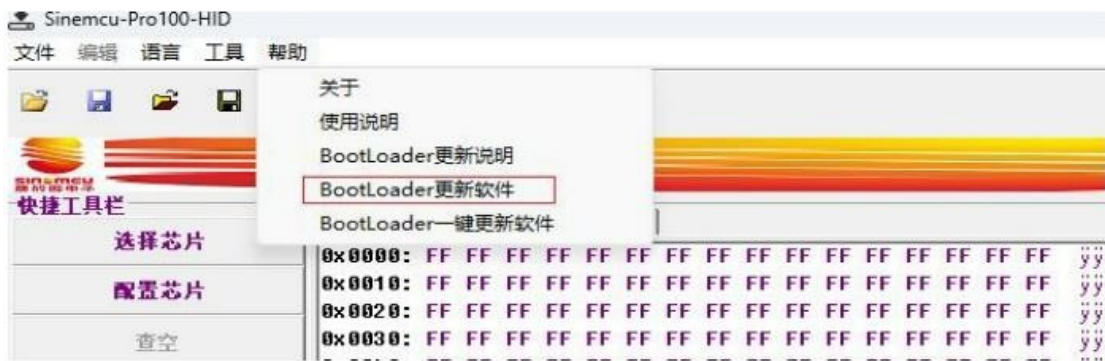

Step two:

After opening the bootloader update software as shown below, click the button to update from HID to Serial, then wait for the update progress bar to finish, close the software when it is finished, and then use the EZPro100 HID version software to download directly.



Second, BootLoader one-click update software


The following serial port to Hid as an example, Hid to serial port the same reason, note that there is no need to burner hold down the button in the power, direct normal operation can be.

Step one:

Connect the burner USB cable to the computer and plug the burner into a power source.

Step two:


Open the EZPro100 HID version of the burning software, if the software pops up the following figure, it means that the burner bootloader needs to be updated (if there is no prompt, no need to operate), and then continue to operate in accordance with the following steps, this pop-up is the version

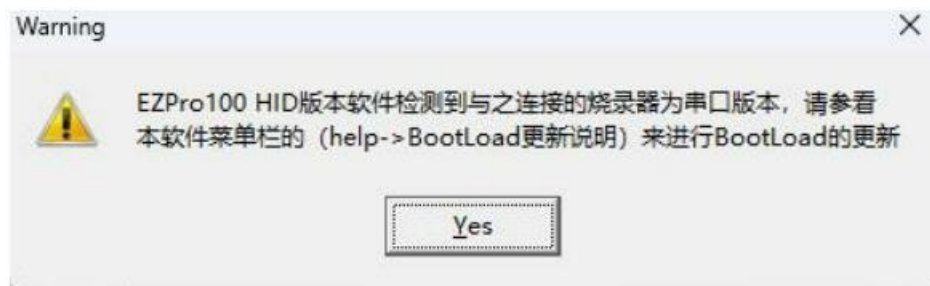

of the serial port is detected, it may also be the version of the Hid, follow the prompts to operate can be.

Step Three:

Click Help in the menu bar of the EZPro100 HID software → Click Open Bootloader to update the software as follows

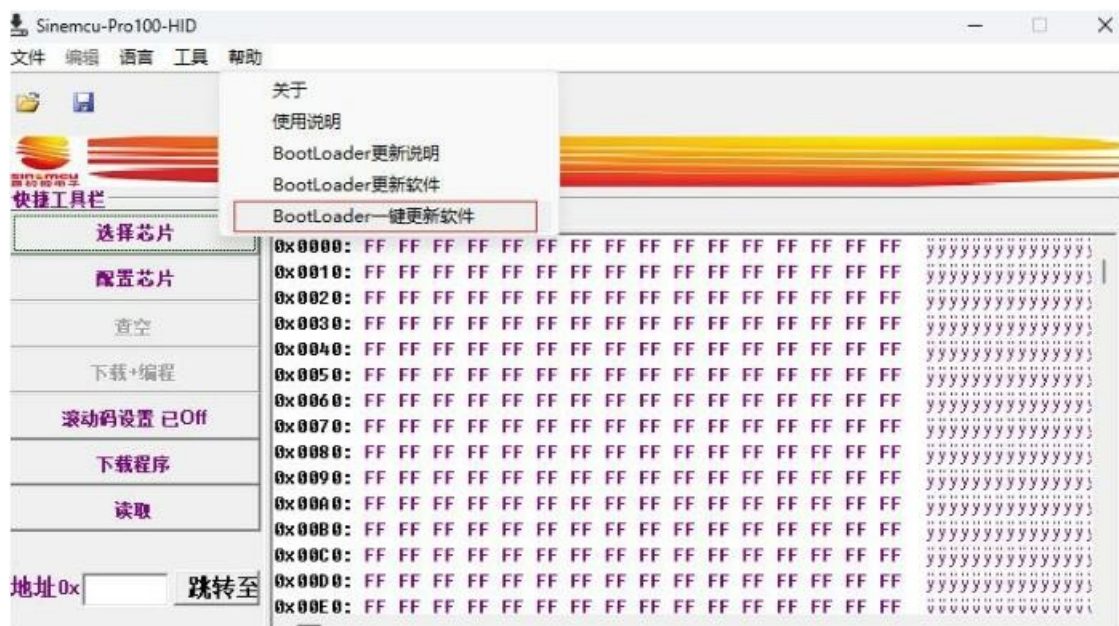

Step Four:

After opening the bootloader update software as shown below, click on the button to update from serial port to HID, then wait for the update progress bar to finish, then close the software and use the EZPro100 HID version

software to download directly.



III. Notes:

(1) The process of updating the BootLoader needs to be done carefully, and the data transfer cable should not be unplugged during the update process. If the update process goes wrong, it is very likely that the previous BootLoader will be damaged, and the burner will not work properly.

(2) This BootLoader update software contains the corresponding firmware of the HID version, after updating with this software, you can directly open the EZPro100 HID burning software to use it.